

01 Disclaimer



Thank you for purchasing this HOBBYWING product! The power of brushless power system is powerful. Any improper use may cause personal injury and damage to the product and related devices. We strongly recommend reading through this user manual before use and strictly abide by the specified operating procedures. We shall not be liable for any liability arising from the use of this product, including but not limited to reimbursement for incidental or indirect losses. Meanwhile, we do not assume any responsibility caused by unauthorized modification of the product. We have the right to change the product design, appearance, performance and use requirements without notice.

02 Warnings

- Please make sure that all wires and parts are insulated before connecting the ESC, because short circuit will damage the ESC.
- Please connect all parts properly. Poor connection will damage the device and you would not control the vehicle normally.
- Please use 60W of welding devices to weld input/output wire and the plug of the ESC to ensure reliable welding.
- Please do not run at full speed if the tire left the ground, otherwise the tire will burst and cause injury.
- The external temperature of the ESC cannot exceed 90°C/194°F. High temperature will destroy the ESC and the motor. Open the overheat protection function of the ESC.
- Please remember to disconnect the battery and the ESC. If not, the ESC will consume electric energy and the battery will be completely discharged which will lead to the failure of battery or ESC. We are not responsible for any damage caused by this!


03 Features

- Built-in 5 common profiles, suitable for all 1/8 Racing, select and use instantly. (e.g. Zero timing-Blinky mode, 1/8 Off-Road Racing, 1/8 On-Road Racing, 1/8 GT Racing, 1/8 Sport mode).
- There are 30 built-in adjustable parameters to set various power requirements. The parameters can be imported and exported, which is convenient for drivers to communicate with and learn from each other.
- Support the firmware upgrade of the ESC (The multi-function LCD programming box or OTA Programmer is needed to purchase). You can enjoy the latest functions.
- Support 48 different motors from HOBBYWING, such as XERUN 4268/4274/G2S, the Max. Speed can be promoted by 50%, easily win your race.
- Multiple function: Low voltage protection, thermal protection of the ESC, motor and capacitor.
- Built-in switch mode BEC with a maximum output of 15A and voltage adjustment from 6V to 8.4V (step: 0.1V) for usage with servos & other devices require different voltages.
- The built-in reverse connection protection circuit of the ESC, avoid the damage to the ESC due to reverse connection.
- The record function of real-time data: Open this function by connecting the ESC with HW Link (OTA Programmer is needed to purchase) and mobile App can check throttle quantity, Voltage, Current, Temperature, RPM and other data in real time, and obtain the running status of the ESC and motor.
- The record function of off-line data: It can not only read out the extreme value data such as the maximum temperature of the esc and motor,maximum RPM of the motor through the LCD program box or HW link app (OTA Programmer is needed to purchase), but also view the historical running data (graph) in the data record in HW link app (OTA Programmer is needed to purchase).

04 Specifications

Mode	XERUN XRB Plus G2S
Cont./Peak Current	200A / 1080A
Motor Type	Sensored / Sensorless Brushless Motors
Applications	1/8 On-Road/Off-Road/Tugger Racing
Motor Limit	With 4S Lipo: KV≤ 3000 4268 / 4274 Size motor With 6S Lipo: KV≤ 2400 4274 Size motor
LiPo Cells	2-6S LiPo
BEC Output	6.8-4V Adjustable, Continuous/Peak Current: 6A/15A(Switch-mode)
Cooling Fan	Powered by the stable BEC voltage of 6-16.8V
Size/Weight	56.1(L) x 42.1(W) x 38.5(H)mm / 122g (W/O Wires)
Connectors	Input End: No Connectors, Output End: No Connectors
Programming Method	Multifunction LCD Program Box, OTA Programmer

05 Connections

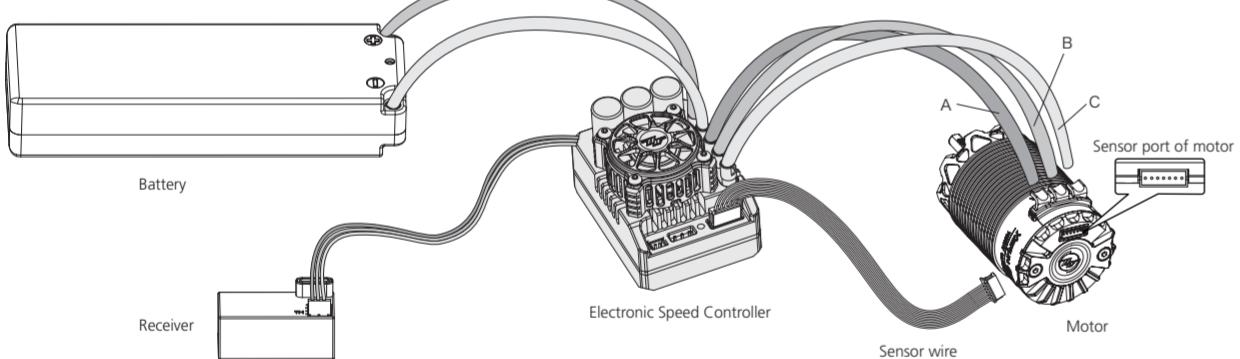

Please connect the wire correctly according to the instructions and drawing:

- 1. Motor Wiring:**
There is a difference between connection of sensored brushless motor and sensorless brushless motor. Please according to the following wiring method:
A. Connect sensored brushless motor:
This is strict wiring order from the ESC to the motor, the three A/B/C motor wires must connect to the three A/B/C motor wires correspondingly. Next, connect the ESC sensor port and the motor sensor port with the stock 6-pin sensor cable. If you don't plug the sensor cable in, your ESC will still work in sensorless mode even if you're using a sensored motor.
Note! If the forward and backward is reverse after installing the motor, please modify "no. 11" parameters "Motor Rotation" to change the direction.
B. Sensorless Motor Wiring:
Users do not need to be worried in regards to the connectivity with the A/B/C(ESC and motor) as there is no polarity. You may find it necessary to swap two wires if the motor runs in reverse.
- 2. Receiver Wiring:**
Insert the receiver control flat cable of ESC into the throttle channel (i.e. THROTTLE channel) of the receiver. Since the red line in the flat cable outputs 6-8.4V voltage to the receiver and steering servo. Please do not supply additional power to the receiver, otherwise the electric adjustment may be damaged.
- 3. Battery Wiring:**
Please make sure that the (+) pole of the ESC is connected to the (+) of the battery, and the (-) pole is connected to the (-). If connect reversely, the ESC cannot start up. (Add the picture of connecting battery here.)

06 ESC Setup

Warning!
This is an extremely powerful system. For your safety and the safety of those around you, we strongly recommend removing the pinion gear attached to the motor before calibrating and setting this system. It is also advisable to keep the wheels in the air when you turn on the ESC.

1 Set the throttle range

- When first use the ESC or the transmitter changes "TRIM" tune, D/R/EPA and other parameters, the throttle range is need to reset. We strongly recommend to open the fail safe function of the transmitter, set the no signal protection of throttle channel("F5") to close the output or set the protection value to the throttle neutral position. Thus the motor can stop running if the receiver cannot receive the signal of the transmitter. The calibrating steps of throttle is follows:
- Hold the SET button. Press the ON/OFF button. Release the SET button once the LED starts to flash.
 - Turn on the transmitter, ensure all parameters (D/R, EPA, ATU) on the throttle channel are at default (100%). For transmitter without LCD, please turn the knob to the maximum, and the throttle "TRIM" to 0. If the transmitter without LCD, turn the knob to the middle point.
 - Start by turning on the transmitter with the ESC turned off but connected to a battery. Holding the "SET" button then press the "ON/OFF" button, the RED LED on the ESC starts to flash (The motor beeps at the same time), and then release the "SET" button immediately.
 - Move the throttle trigger to the neutral position and press the SET button.
 - Move the throttle trigger to the end position of forward and press the SET button.
 - Move the throttle trigger to the end position of backward and press the SET button.
 - Set the neutral point, the full throttle endpoint and the full brake endpoint.
 - Leave transmitter at the neutral position, press the "SET" button, the RED LED dies out and the GREEN LED flashes 1 time and the motor beeps 1 time to accept the neutral position.
 - Pull the throttle trigger to the full throttle position, press the "SET" button, the GREEN LED blinks 2 times and the motor beeps 2 times to accept the full throttle endpoint.
 - Push the throttle trigger to the full brake position, press the "SET" button, the GREEN LED blinks 3 times and the motor beeps 3 times to accept the full brake endpoint.
 - Note:
 - The end position of forward: Pull the trigger to the maximum throttle position if it is pistol-style transmitter. Push the throttle to the top if it is board-style transmitter.
 - The end position of backward: Push the trigger to the maximum brake position if it is pistol-style transmitter. Pull the throttle to the bottom if it is board-style transmitter.
 - The end position of forward: Pull the trigger to the maximum throttle position if it is pistol-style transmitter. Push the throttle to the top if it is board-style transmitter.
 - The end position of backward: Push the trigger to the maximum brake position if it is pistol-style transmitter. Pull the throttle to the bottom if it is board-style transmitter.

2 Power on/off and Beep Illustration

- Illustration of power on/off: Short press the ON/OFF key to turn on the ESC in the off state, and long press the ON/OFF key to turn off the ESC.
- Beep illustration when turn on the ESC: When turn on ESC under normal conditions (i.e. it is started without pressing the SET key), the motor will emit several Beeps to indicate the LiPo cells. For example, "Beep, Beep, Beep" means 3S, "Beep, Beep, Beep" means 4S.

3 Programmable Items

Type	ID	Item	Parameters																		
			For/Brake		For/Rev/Brake		For/Rev														
General Setting																					
1A	Running Mode	For/Brake																			
1B	Reverse Force	25%																			
1C	LiPo Cells	Auto Calculate																			
1D	Cutoff Voltage	Disabled																			
1E	ESC Thermal Protection	Enabled																			
1F	Motor Thermal Protection	Enabled																			
1G	BEC Voltage		6.0-8.4V (Adjust Step 0.1V)																		
1H	Sensor Mode	Full Sensored	Sensored/Sensorless Hybrid																		
1I	Motor Rotation	CCW	CW																		
1J	Phase-AC Swap	Enabled	Disabled																		
2A	Throttle Rate Control		1-30 (Adjust Step 1)																		
2B	Throttle Curve	Linear	Customized																		
2C	Neutral Range	6%	8%																		
2D	Initial Throttle Force		1-15 (Adjust Step 1)																		
2E	Coast		0-15 (Adjust Step 1)																		
2F	PWM Drive Frequency	2K	3K	4K	8K	12K	16K	24K	32K	Customized											
2G	Softening Value		0-30 (Adjust Step 1)																		
2H	Softening Range	0%	10%	20%	25%	30%	35%	40%	45%	55%	60%	65%									
2I	RPM Limit	Unlimited	8000RPM 4000RPM (4poles)		7400RPM 3700RPM (4poles)		6800RPM 3400RPM (4poles)		6200RPM 3100RPM (4poles)		5600RPM 2800RPM (4poles)										
3A	Drag Brake		0%-100% (Adjust Step 1%)																		
3B	Max. Brake Force		0%-100% (Adjust Step 1%)																		
3C	Initial Brake Force	= Drag Brake		0%-50% (Adjust Step 1%)																	
3D	Brake Rate Control		1-20 (Adjust Step 1)																		
3E	Brake Curve	Linear	Customized																		
3F	Brake Frequency	0.5K	1K	2K	4K	8K	16K	Customized													
4A	Boost Timing		0-48° (Adjust Step 1°)																		
5A	Turbo Timing		0-48° (Adjust Step 1°)																		
5B	Turbo Delay	Instant	0.05s	0.1s	0.15s	0.2s	0.25s	0.3s	0.4s	0.45s	0.5s	0.6s									
5C	Turbo Increase Rate (deg/0.1sec)	3deg/0.1s	6deg/0.1s	9deg/0.1s	12deg/0.1s	15deg/0.1s	18deg/0.1s	21deg/0.1s	24deg/0.1s	27deg/0.1s	30deg/0.1s	Instant									
5D	Turbo Decrease Rate (deg/0.1sec)	3deg/0.1s	6deg/0.1s	9deg/0.1s	12deg/0.1s	15deg/0.1s	18deg/0.1s	21deg/0.1s	24deg/0.1s	27deg/0.1s	30deg/0.1s	Instant									

3C: Initial Brake Force:

- It is also known as "minimum brake force". It is the force when pushing throttle trigger from neutral zone to the initial brake position. To get a smoother braking effect, the default is equal to the drag brake.
- 3D: Brake Rate Control:**
It's adjustable from 1 to 20 (step: 1), the lower the brake rate, the more limit on the brake response. A suitable rate can aid the driver to brake his vehicle correctly. Generally, you can set it to "Customized", then the brake frequency can be adjusted to a variable value (which ranges from 0K to 16K) at 0-100% throttle input, please choose the frequencies as per the actual test results of your vehicles.
- 3E: Brake Curve:**
The brake force will be larger if the frequency is low; you will get a smoother brake force when the value is higher. If set this item to "Customized", then the brake frequency can be adjusted to a variable value (which ranges from 0K to 16K) at 0-100% throttle input, please choose the frequencies as per the actual test results of your vehicles.
-